



Lead. Move. Live.

SYNERGY RIDE

MODEL NUMBER
SYN-R350



TOP SPEED
32 KM/H / 20 MPH



BATTERY RANGE
30+ KM / 19+ MI



MAX RIDER WEIGHT
120 KG / 265 LBS

THE ULTIMATE URBAN COMMUTING SCOOTER

The Synergy Ride 350 is the ultimate urban commuting scooter for overcoming treacherous city streets. The Synergy Ride Urban-Rider E-Scooter is powered by a 350W electric motor, it can reach speeds of 32km/h, and with a range of up to 30-40km (depends on conditions and riders bodyweight). The Synergy Ride was designed with portability in mind, folding up for compact transport or storage. The body of the scooter is Aluminum, and it offers front suspension as well as hand-actuated front and back disc brakes, plus electric brakes. The Synergy Ride also features a digital display of speed and battery charge.

IMPORTANT: When parking your SYNERGY RIDE, we recommend you lock your battery by setting it on **locked** position, then remove the key.

TECH SPECIFICATIONS

MOTOR 350W DC brushless motor	TIRES 8 inch tires	SCOOTER DIMENSIONS 45.2" L x 7.8" W x 43.3" H (Inches) 115 L x 20 W x 110 H (CM)
BATTERY 36v 10.4AH Lithium Battery Input Voltage: 42.0V	WATER PROOF IP54	SCOOTER DIMENSIONS WHEN FOLDED 44.8" L x 7.8" W x 15" H (Inches) 114 L x 20 W x 38 H (CM)
TOP SPEED 32+ KM/H / 20 MPH (Can be set to 25 KM/H)	SPEED: GRADE ABILITY 25 Degree	SPEED: TEMPERATURE Working Temp: -10°C~40°C (14F-104F) Storage Temp: -10°C~40°C (14F-104F)
BATTERY RANGE Up to 30 KM / 19+ MI Depends on road conditions and rider weight	SPEED UP Throttle	DISPLAY Colour Display
CHARGER Rated Power: 110W / 1.5A Input Voltage: 100-240VAC Output Voltage: 42.0V	BRAKES Rear drum brake + electric brake	COLOUR Black
CHARGE TIME 5 Hours	SUSPENSION Front suspension (x2)	MAX PERMISSIBLE TOTAL WEIGHT 120 kg / 265 lbs
SCOOTER WEIGHT 20 kg / 33 lbs	FRAME Aluminum alloy 6061	RIDER MINIMUM AGE / SIZE RANGE 16 years old (between 150-215 cm)



BATTERY

The battery is the main energy source of your SYNERGY RIDE, so be sure to treat it with care at all times. We recommend that you recharge it only with the charger provided with your SYNERGY RIDE.

CHARGING AND BATTERY

Your SYNERGY RIDE has an external charger. Connect the charging cable to SYNERGY RIDE's charging socket under the foot board, on the right side at the rear. Then connect the charger's electric cable to an electrical outlet.

Charging Light Red — Battery is charging. **Charging Light Green** — Charging is complete.

Avoid long periods of time with an uncharged or fully charged battery. To maximize your SYNERGY RIDE's battery performance, fully charge it for 7 hours, once a month, or after each use of 24 hours.